OPERATION MANUAL

BARGER 3x4 20-LITE LED





AN RST COMPANY

Fixture Controls





This KNOB is located on the right side of the grey box. Use this KNOB to control dimming and kelvin output. See LCD Controller Operation Manual for more info.



This is the Master Power Switch located on the left side of the grey box. Use this switch to turn the power on & off. See LCD Controller Operation Manual for more info.



This is the Ethernet (RJ45) DMX IN & OUT located on the right side of the grey box. Use these plugs to connect to the controller source & to connect multiple fixtures.



This is the XLR 5pin DMX OUT plug located on the right side of the grey box. Use this plug to send the DMX signal to the next source.



This is the XLR 5pin DMX IN plug located on the right side of the grey box. Use this plug to receive the DMX signal from the previous source.

Fixture Specifications



Weight	58 lbs.
Dimensions	40" W x 56" H
Kelvin Range	2700K-6000K
CRI (Color Rendering Index)	95+
Dimming	On board digital controller/External control (DMX or ART NET)
Handling	Solid aluminum body, yoke and tilt bracket
Mounting	Junior combo pin
Tilt Angle	+/- 90°
Voltage Input	120 VAC
Wattage	880W MAX
Housing Color	Green/Grey
Ambient Operating Temp.	-20 to +45° C (-4 to +113° F)
Est. LED Lifetime (L70)	50,000 Hours
IP Rating	IP 20









rstvisions.com

premier-lighting.com

barger-lite.com

Check us out on Facebook at

www.facebook.com/BargerLite-1401080030139637/

or

Check us out on Instagram at

www.instagram.com/bargerlite/

Main Location

12023 Victory Blvd. North Hollywood, CA 91606 Phone: (310) 401-0633

Fax: (818) 566-6817

Warehouse

3861 Oakcliff Industrial Ct. Atlanta, GA 30340 Phone: (470) 545-5401