



# FocalPoint™ Projection Screen by Draper—Assembly Map

## 60" x 96" (152 x 244 cm) Image Area—16:10 Format

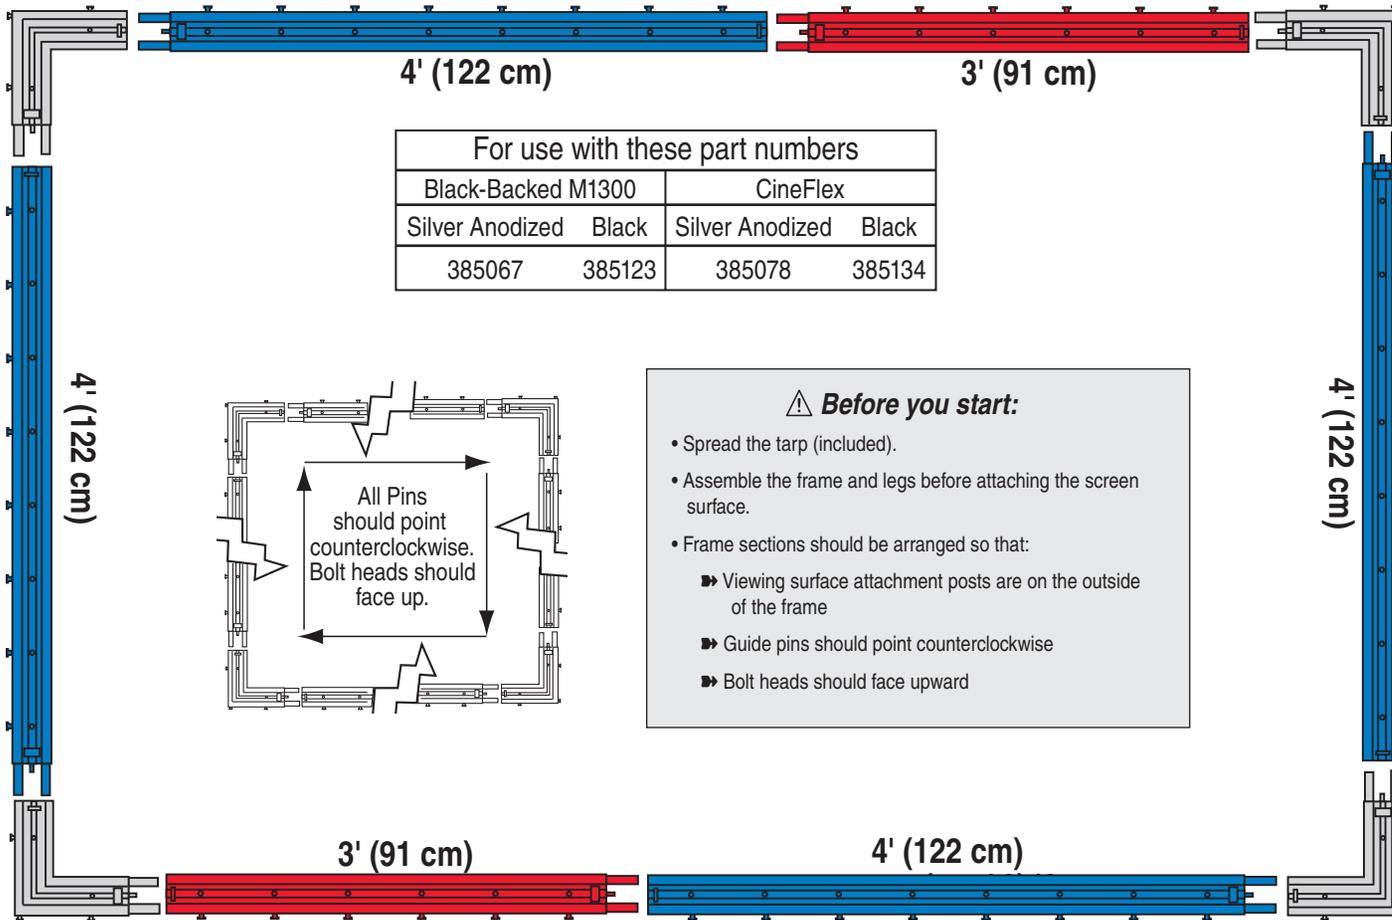

For use with these part numbers


Black-Backed M1300		CineFlex	
Silver Anodized	Black	Silver Anodized	Black
385067	385123	385078	385134

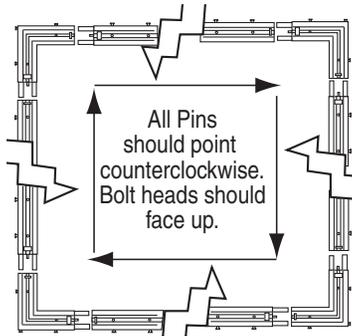

- ⚠ Before you start:**
- Spread the tarp (included).
  - Assemble the frame and legs before attaching the screen surface.
  - Frame sections should be arranged so that:
    - Viewing surface attachment posts are on the outside of the frame
    - Guide pins should point counterclockwise
    - Bolt heads should face upward



**⚠ Caution:**  
Beware of  
pinch points.

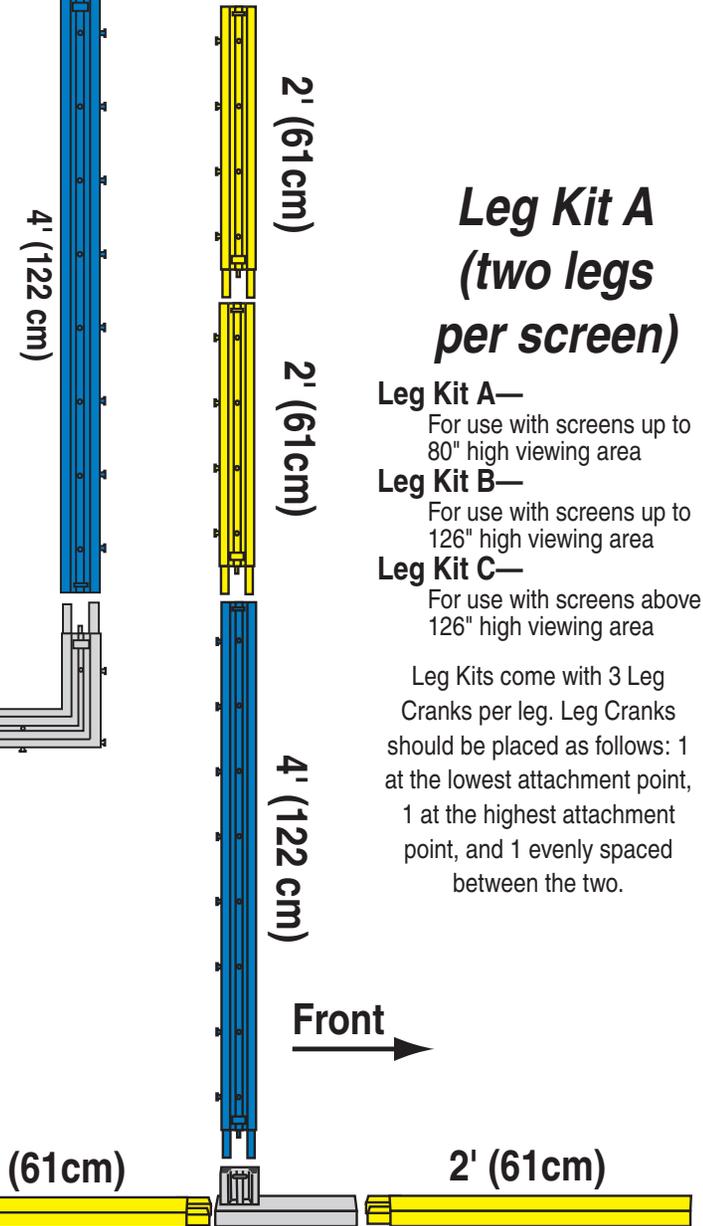

### Leg Kit A (two legs per screen)

- Leg Kit A—**  
For use with screens up to 80" high viewing area
- Leg Kit B—**  
For use with screens up to 126" high viewing area
- Leg Kit C—**  
For use with screens above 126" high viewing area

Leg Kits come with 3 Leg Cranks per leg. Leg Cranks should be placed as follows: 1 at the lowest attachment point, 1 at the highest attachment point, and 1 evenly spaced between the two.

**DRAPER®**