FocalPoint™ Projection Screen by Draper—Assembly Map

67½" x 120" (1471 x 305 cm) Image Area—16:9 HDTV Format

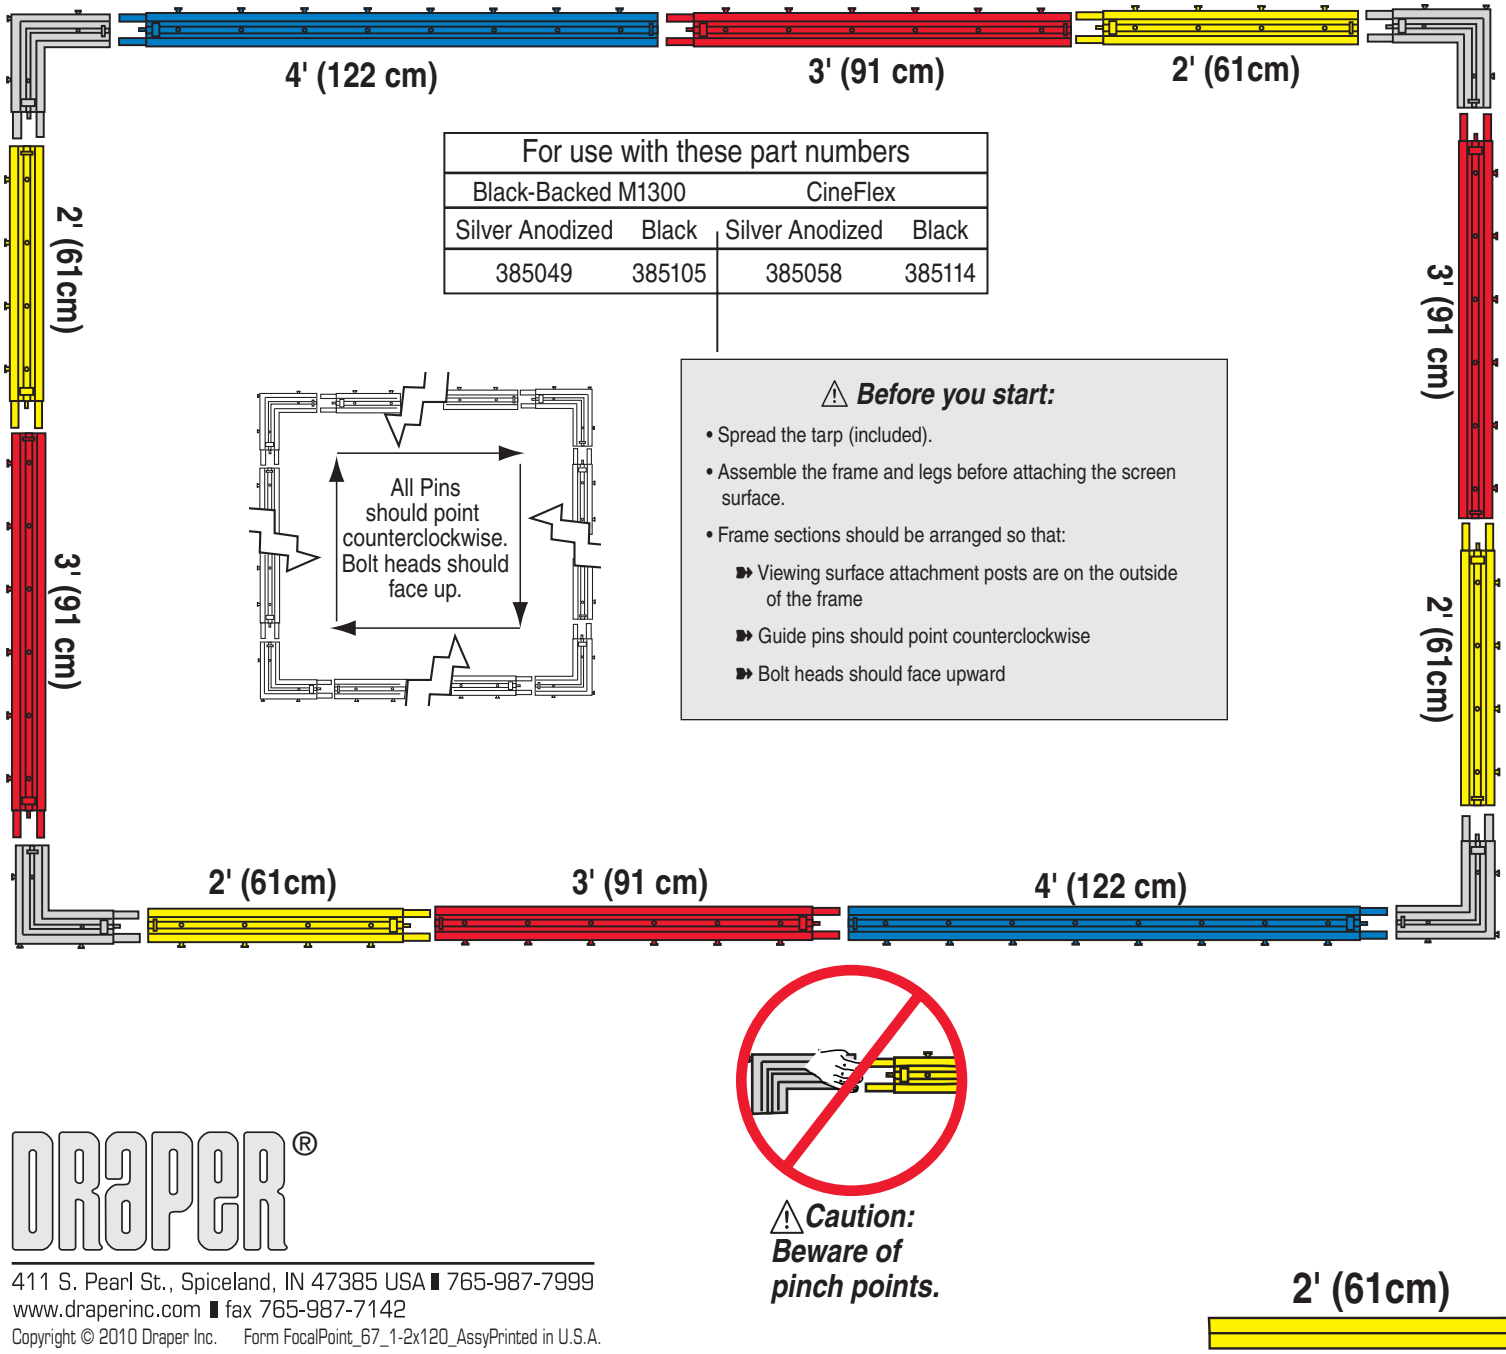

For use with these part numbers			
Black-Backed M1300		CineFlex	
Silver Anodized	Black	Silver Anodized	Black
385049	385105	385058	385114

⚠ *Before you start:*

- Spread the tarp (included).
- Assemble the frame and legs before attaching the screen surface.
- Frame sections should be arranged so that:
  - Viewing surface attachment posts are on the outside of the frame
  - Guide pins should point counterclockwise
  - Bolt heads should face upward

⚠ Caution: Beware of pinch points.

Leg Kit A (two legs per screen)

Leg Kit A—
For use with screens up to 80" high viewing area

Leg Kit B—
For use with screens up to 126" high viewing area

Leg Kit C—
For use with screens above 126" high viewing area

Leg Kits come with 3 Leg Cranks per leg. Leg Cranks should be placed as follows: 1 at the lowest attachment point, 1 at the highest attachment point, and 1 evenly spaced between the two.

DRAPER®

411 S. Pearl St., Spiceland, IN 47385 USA ▮ 765-987-7999
www.draperinc.com ▮ fax 765-987-7142

Copyright © 2010 Draper Inc.

Form FocalPoint_67_1-2x120_AssyPrinted in U.S.A.