StageScreen Projection Screen by Draper—Assembly Map

Stiffener | Stiffener | Stiffener | Stiffener | Stiffener

6′ (183cm) | 6′ (183cm) | 5′ (152cm) | 2′ (61cm)

Red dots above indicate recommended approximate attachment points for flying or for wall bracket locations if wall-mounted.

135" x 240" (343 x 610 cm) Image Area—16:9 HDTV Format

2′ (61cm) | 3½′ (107cm) | 5′ (152cm)

5′ (152cm) | 3½′ (107cm) | 2′ (61cm)

For use with these part numbers:

383291 383500 383324 383566

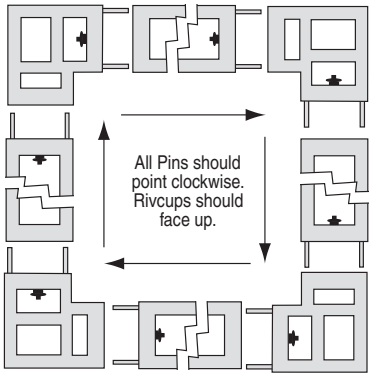

⚠ *Before you start:*

- Spread the tarp (included).
- Lay the viewing surface out face down on the tarp.
- Assemble the frame on top of the screen surface.
- Frame sections should be arranged so that:
  - Viewing surface attachment posts are on the outside of the frame
  - Guide pins should point clockwise
  - Rivcups should face upward

⚠Caution: Beware of pinch points.

DRAPER®

411 S. Pearl St., Spiceland, IN 47385 USA ▮ 765-987-7999
www.draperinc.com ▮ fax 765-987-7142

Copyright © 2012 Draper Inc. Form StageScreen_135x240_Assy Printed in U.S.A.

2′ (61cm) | 5′ (152cm) | 6′ (183cm) | 6′ (183cm)

Stiffener | Stiffener | Stiffener | Stiffener | Stiffener