PHILIPS Selecon

Studio Panel LED Luminaires



Philips Selecon Offices

Philips Selecon - Dallas

10911 Petal Street Dallas, TX 75238 Tel: +1 214-647-7880

Fax: +1 214-647-8030

Philips Selecon - Asia

Unit C, 14/F, Roxy Industrial Centre No. 41-49 Kwai Cheong Road Kwai Chung, N.T., Hong Kong Tel: +852 2796 9786

Fax: +852 2798 6545

Philips Selecon - Auckland

19-21 Kawana Street Northcote, Auckland 0627 New Zealand Tel: +64 9 481 0100

Fax: +64 9 481 0101

Philips Selecon - Europe

Rondweg zuid 85 Winterswijk 7102 JD The Netherlands

Tel: +31 (0) 543-542516

Website:

www.seleconlight.com

The material in this manual is for information purposes only and is subject to change without notice. Philips Selecon assumes no responsibility for any errors or omissions which may appear in this manual. For comments and suggestions regarding corrections and/or updates to this manual, please visit the Philips Selecon web site at www.seleconlight.com or contact your nearest Philips Selecon office.

El contenido de este manual es solamente para información y está sujeto a cambios sin previo aviso. Philips Selecon no asume responsabilidad por errores o omisiones que puedan aparecer. Cualquier comentario, sugerencia o corrección con respecto a este manual, favor de dirijirlo a la oficina de Philips Selecon más cercana.

Der Inhalt dieses Handbuches ist nur für Informationszwecke gedacht, Aenderungen sind vorbehalten. Philips Selecon uebernimmt keine Verantwortung für Fehler oder Irrtuemer, die in diesem Handbuch auftreten. Für Bemerkungen und Verbesserungsvorschlaege oder Vorschlaege in Bezug auf Korrekturen und/oder Aktualisierungen in diesem Handbuch, moechten wir Sie bitten, Kontakt mit der naechsten Philips Selecon-Niederlassung aufzunehmen.

Le matériel décrit dans ce manuel est pour information seulement et est sujet à changements sans préavis. La compagnie Philips Selecon n'assume aucune responsibilité sur toute erreur ou ommission inscrite dans ce manuel. Pour tous commentaires ou suggestions concernant des corrections et/ou les mises à jour de ce manuel, veuillez s'il vous plait contacter le bureau de Philips Selecon le plus proche.

Note: Information contained in this document may not be duplicated in full or in part by any person without prior written approval of Philips Selecon. Its sole purpose is to provide the user with conceptual information on the equipment mentioned. The use of this document for all other purposes is specifically prohibited.

Document Number: **85-6375D**Version as of: **17 December 2014**

Studio Panel LED Luminaire Installation & User's Manual ©2012 - 2014 Philips Group. All rights reserved.

IMPORTANT INFORMATION

Warnings and Notices

When using electrical equipment, basic safety precautions should always be followed including the following:

a. READ AND FOLLOW ALL SAFETY INSTRUCTIONS.



- b. Do not use outdoors.
- c. Do not mount near gas or electric heaters.
- d. Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.
- e. The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
- f. Do not use this equipment for other than intended use.
- g. Refer service to qualified personnel.

SAVE THESE INSTRUCTIONS.



WARNING: You must have access to a main circuit breaker or other power disconnect device before installing any wiring. Be sure that power is disconnected by removing fuses or turning the main circuit breaker off before installation. Installing the device with power on may expose you to dangerous voltages and damage the device. A qualified electrician must perform this installation.

WARNING: Refer to National Electrical Code® and local codes for cable specifications. Failure to use proper cable can result in damage to equipment or danger to personnel.

WARNING: This equipment is intended for installation in accordance with the National Electric Code® and local regulations. It is also intended for installation in indoor applications only. Before any electrical work is performed, disconnect power at the circuit breaker or remove the fuse to avoid shock or damage to the control. It is recommended that a qualified electrician perform this installation.

Additional Resources for DMX512

For more information on installing DMX512 control systems, the following publication is available for purchase from the United States Institute for Theatre Technology (USITT), "Recommended Practice for DMX512: A Guide for Users and Installers, 2nd edition" (ISBN: 9780955703522). USITT Contact Information:

USITT 315 South Crouse Avenue, Suite 200 Syracuse, NY 13210-1844 Phone: 1.800.938.7488 or 1.315.463.6463 www.usitt.org

Philips Selecon Limited Three-Year Warranty

Philips Selecon offers a three-year limited warranty of its luminaires against defects in materials or workmanship from the date of delivery. A copy of Philips Selecon three-year limited warranty containing specific terms and conditions can be obtained from the Philips Selecon web site at www.seleconlight.com or by contacting your local Philips Selecon office.

TABLE OF CONTENTS

Philips Selecon Offices	Inside Front Cover
IMPORTANT INFORMATION	
Warnings and Notices	
Additional Resources for DMX512	
Philips Selecon Limited Three-Year Warranty	1
TABLE OF CONTENTS	
PREFACE	
About this Manual	
Included Items	
Accessories	
Studio Panel LED Luminaire Power Input Cables (for North America only)	
Studio Panel LED Luminaire Accessories	3
STUDIO PANEL LED LUMINAIRE OVERVIEW	
Studio Panel LED Luminaire Components	
Major Luminaire Components	
Luminaire Connections and Menu System	
LCD Display / Menu System	5
INSTALLATION AND SET UP	
Power Requirements	
AC Power Operation	
DC Power Operation	
Connecting Power Connecting Studio Panel LED Luminaires to AC Power	
Connecting Studio Panel LED Luminaires to AC Power	
Connecting Studio Faller LED Luminates to DC Fower Connecting to the DMX512 Network	
Mounting Luminaire	
Handle / Mount Assembly Removal and Installation	
Stud Adapter Installation	
Barndoor Installation	
OPERATION AND PROGRAMMING	11
LCD Display and Menu System	12
LCD Display and Menu System Operation	
Quick Selection Buttons	
CCT (Correlated Color Temperature) Selection Button	
Preset Selection Button	
Dimmer Selection Button	
DMX CONTROL	17
16-Bit Mode	15
8-Bit Mode	
RDM CONTROL	13
Studio Panel LED Luminaire RDM Parameter IDs	16
CLEANING AND CARE	10
Special Cleaning and Care Instructions	19
Front Lens Cleaning	
Service and Maintenance	
Accessories	
TECHNICAL SPECIFICATIONS	
Studio Panel LED Luminaire Operational Specifications	21
Studio Panel LED Luminaire Operational Specifications Studio Panel LED Luminaire Dimensions	
Studio I and LED Luminand Differsions	

PREFACE

1. About this Manual

The document provides installation and operation instructions for the following products:

• Studio Panel LED Luminaire - PLSTUPNL-03.

Please read all instructions before installing or using this product. *Retain this manual for future reference*. Additional product information and descriptions may be downloaded at www.seleconlight.com

2. Included Items

Each Studio Panel LED Luminaire includes the following items:

- Studio Panel LED Luminaire
- Removable Handle / Mount Assembly
- Stud Mount Adapter (Male / Female)
- PC1BE AC Power Input Cable (39 inches / 1 meter), Powercon with Bare End* (*Note, user supplies and installs own AC input connector)
- Installation and User's Manual (this document)

3. Accessories

Contact your Authorized Philips Selecon Dealer for price and availability of all accessories for Studio Panel LED Luminaires. Additional information can be found on the Philips Selecon web site at www.seleconlight.com.

Studio Panel LED Luminaire Power Input Cables (for North America only)

Part Number	Description
PC1BE	Studio Panel LED Luminaire AC Power Input Cable (39 inches / 1 meter), Powercon with Bare End* (*Note, user supplies and installs own AC input connector)
PC1GP	Studio Panel LED Luminaire AC Power Input Cable (39 inches / 1 meter), Powercon with Stagepin Connector
PC1GTL	Studio Panel LED Luminaire AC Power Input Cable (39 inches / 1 meter), Powercon with Twistlock Connector
PC1GR	Studio Panel LED Luminaire AC Power Input Cable (39 inches / 1 meter), Powercon with Edison Connector
PC3BE	Studio Panel LED Luminaire AC Power Input Cable (9.8 Feet / 3 meter), Powercon with Bare End* (*Note, user supplies and installs own AC input connector)
PC8BE	Studio Panel LED Luminaire AC Power Input Cable (26 Feet / 8 meter), Powercon with Bare End* (*Note, user supplies and installs own AC input connector)
PC8GR	Studio Panel LED Luminaire AC Power Input Cable (26 Feet / 8 meter), Powercon with Edison Connector


Studio Panel LED Luminaire Accessories

Part Number	Description
PLSTUPNLBD	2-Leaf Snap On Barndoor
PLSTUPNLSAF	Female 5/8-Inch Stud Adapter
PLSTUPNLSAM	Male 5/8-Inch Stud Adapter
MC	Mega Claw, Black, Anodized
SC	Molded Yoke C-Clamp
HC	Light Weight Half Coupler
82003	Safety Cable
PLSTUPNLL40	40-Degree Standard Spread Lens
PLSTUPNLL60	60-Degree Standard Spread Lens

STUDIO PANEL LED LUMINAIRE OVERVIEW

1. Studio Panel LED Luminaire Components

Major Luminaire Components

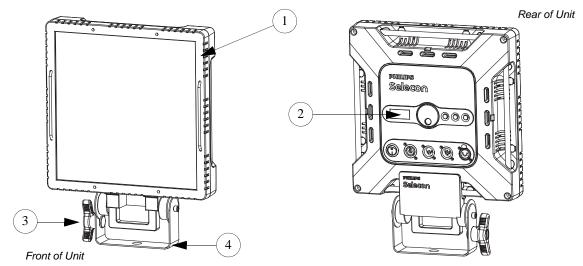

- 1) Studio Panel LED Luminaire Head
- 2) LCD Display Menu System (see "LCD Display / Menu System" on page 5 for more information)
- 3) Tilt Axis Point / Locking Handle
- 4) Handle / Mount Assembly (note, this assembly is removable and can be installed on all four sides)

Figure 1: Studio Panel LED Luminaire Components

Luminaire Connections and Menu System


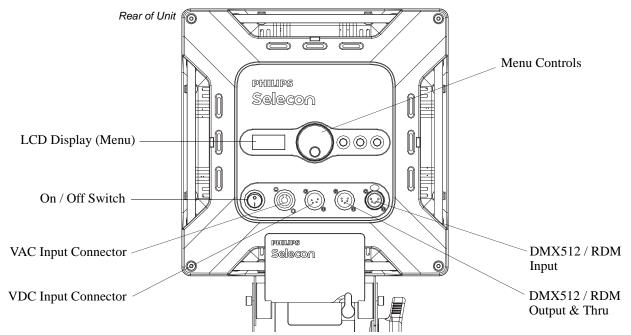


Figure 2: Studio Panel LED Luminaire - Rear View

LCD Display / Menu System

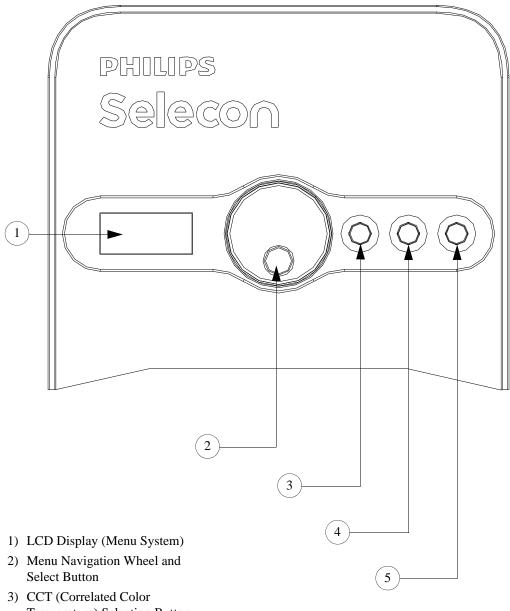

- Temperature) Selection Button
- 4) Dimmer Selection Button
- 5) Preset Selection Button

Figure 3: LCD Display & Menu System

Note: For Menu operation and programming details, refer to "LCD Display and Menu System" on page 12.

INSTALLATION AND SET UP

1. Power Requirements

The Studio Panel LED Luminaire operates on either AC or DC voltage. The luminaire contains an on-board ON / OFF switch.



WARNING! Turning off the unit at power switch does not disconnect power from unit. Always disconnect power input cables to completely remove power from unit when not in use.

AC Power Operation

When connected to an AC source, the unit operates on 100 to 240 volts AC (+/- 10%, auto-ranging). The luminaire contains an auto-ranging power supply. Each luminaire can draw up to 50 Watts.

Table 1: Studio Panel LED Luminaire Voltage (VAC) vs. Current

Voltage (AC)	Total Current (A)
100	0.50
110	0.45
120	0.42
130	0.38
140	0.36
150	0.33
160	0.31
170	0.29

Voltage (AC)	Total Current (A)
180	0.28
190	0.26
200	0.25
210	0.24
220	0.23
230	0.22
240	0.21

Note: For wiring of AC input connector, refer to "Connecting Studio Panel LED Luminaires to AC Power" on page 7

DC Power Operation

When connected to a DC power source, the unit operates on 12 to 24 volts DC at 50 Watts (max.).

Table 2: Studio Panel LED Luminaire Voltage (VDC) / Wattage

Voltage (DC)	Wattage
12 - 24 VDC	50 Watts (max.)

Note: For wiring of DC input connector, refer to "Connecting Studio Panel LED Luminaires to DC Power" on page 8.

2. Connecting Power

Units can be powered in one of two ways:


- Direct connection to an AC power source using an AC input cable. AC input cable accessories are described in "Studio Panel LED Luminaire Power Input Cables (for North America only)" on page 3. For wiring of AC input connector, refer to "Connecting Studio Panel LED Luminaires to AC Power" on page 7.
- Direct connection to a DC power source through the unit's DC input power connection. For wiring of DC input connector, refer to "Connecting Studio Panel LED Luminaires to DC Power" on page 8.

Connecting Studio Panel LED Luminaires to AC Power

If the unit is supplied with an AC input cable but you did not order an AC input connector, Table 3 describes how to connect power to your Studio Panel LED Luminaire. Field wiring of the Studio Panel LED Luminaire is straight forward. A total of 3 wires/conductors need to be brought to the unit. The following wiring scheme is required:

Table 3: Studio Panel LED Luminaire AC Input Connections

Wire Color	Purpose
Brown	Main / Line (100 to 240VAC)
Blue	Neutral
Green/Yellow	Ground (Earth)

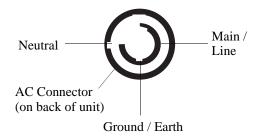

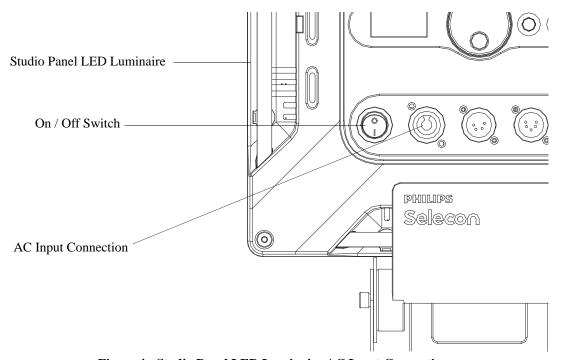


Figure 4: Studio Panel LED Luminaire AC Input Connection

CAUTION: In the event the AC input cable of this luminaire is damaged, it must be replaced, by the user, with an approved cable by Philips Selecon through an Authorized Dealer or Service Center. Replacement AC input cables are listed in "Accessories" on page 3.


Connecting Studio Panel LED Luminaires to DC Power

The Studio Panel LED Luminaire can be connected to a DC Voltage power source (i.e., AC to DC converter or battery). Table 4 describes how to connect power to your Studio Panel LED Luminaire to a VDC power source.

Field wiring of the Studio Panel LED Luminaire is straight forward. A total of 2 wires/conductors need to be brought to the unit through a 4-pin connector. The following wiring scheme is required:

Table 4: Studio Panel LED Luminaire AC Input Connections

Pin Number	Purpose
1	V -
2	Not Used
3	Not Used
4	V +

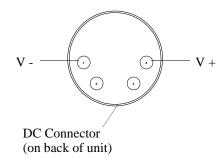

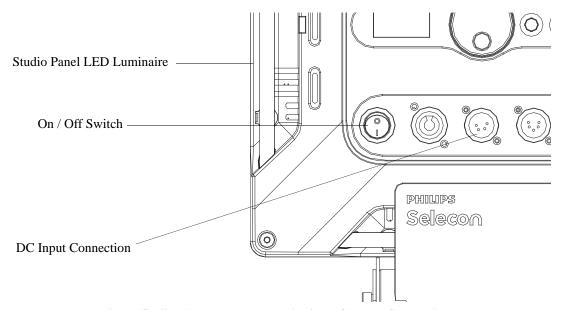


Figure 5: Studio Panel LED Luminaire DC Input Connection

3. Connecting to the DMX512 Network

Basic DMX512 installation consists of connecting multiple Studio Panel LED Luminaires together (up to 32 luminaires) in "daisy-chain" fashion. A cable runs from the control console (or DMX512 control source) to the DMX connector on the first Studio Panel LED Luminaire. Another cable runs from the other DMX connector on the first unit to a DMX connector on the next Studio Panel LED Luminaire (or DMX512 device to be controlled).


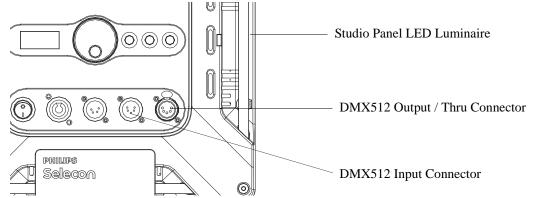


Figure 6: Studio Panel LED Luminaire DMX512 Input / Output Connections

Note: For more information on DMX512 networking and systems, refer to "Additional Resources for DMX512" on page 1. For Studio Panel LED Luminaire DMX Mapping, refer to "DMX CONTROL" on page 15.

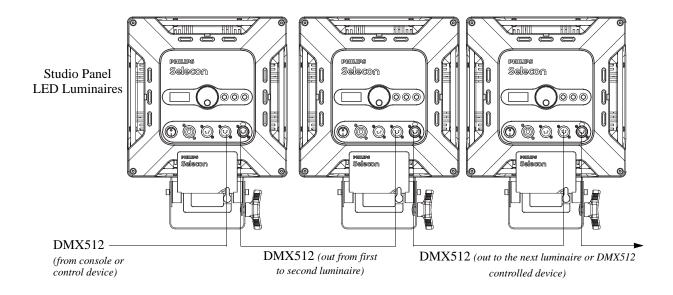

DMX512 Signal	XLR Pin	
	, LEKT III	
Common (Drain)	1	
DMX512 -	2	
DMX512 +	3	

Figure 7: Studio Panel LED Luminaire - DMX512 Connections

4. Mounting Luminaire

The Studio Panel LED Luminaire is provided with a Handle / Mount Assembly. This assembly easily attaches and detaches from the luminaire via a quick-release handle. This Handle / Mount Assembly is designed to accept a variety of mounting hooks, clamps, etc. for hanging applications or stud adapters for stand mounting.

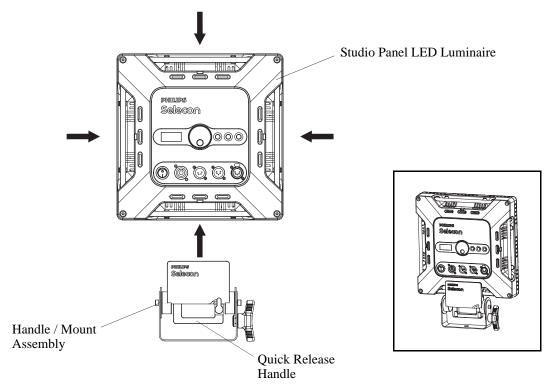


Figure 8: Handle / Mount Assembly

Handle / Mount Assembly Removal and Installation

To release the Handle / Mount Assembly, rotate the handle locking mechanism (as shown in **Figure 9**), grasp the Quick Release Handle and pull down and away from luminaire. The locking mechanism prevents the Handle / Mount Assembly from inadvertently separating from the luminaire assembly.

The Handle / Mount Assembly may be attached to any side of the Studio Panel LED Luminaire as shown in Figure 8.


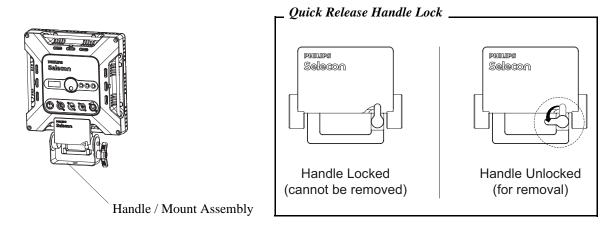


Figure 9: Handle / Mount Assembly - Locking Mechanism

Stud Adapter Installation

Installing an optional Stand Stud Adapter is quick and easy. Simply rotate the Handle / Mount Assembly to access the mounting hole in Handle / Mount Assembly. As shown in **Figure 10**, insert retaining bolt into hole and thread into Stud Adapter.

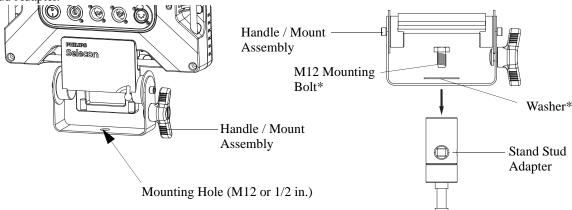

Note: *M12 Bolt and washer supplied with stand stud adapter.

Figure 10: Stand Stud Adapter

5. Barndoor Installation

The Studio Panel LED Luminaire can accept up to four snap-on barndoor leaves (sold separately in sets of two). The barndoor assembly is easily installed or removed as desired as shown in **Figure 11**.

- To install a barndoor assembly, remove Handle / Mount Assembly, pull back on quick release knob, and snap barndoor leaf onto side of Studio Panel LED Luminaire. Reinstall Handle / Mount Assembly.
- To remove a barndoor leaf, pull back on quick release knob and pull leaf away from Studio Panel LED Luminaire.

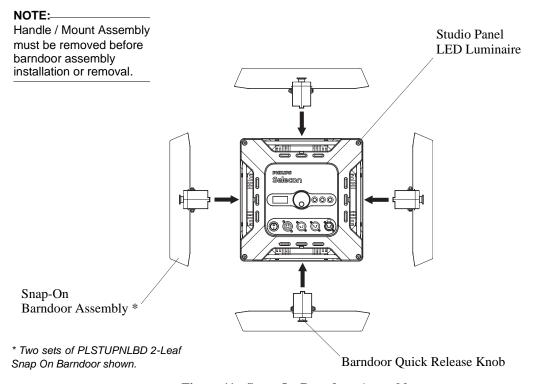


Figure 11: Snap-On Barndoor Assembly

OPERATION AND PROGRAMMING

1. LCD Display and Menu System

The Studio Panel LED Luminaire's LCD Display and Menu System provides local control for accessing the following fixture's settings:

- CCT (Correlated Color Temperature)
- Dimmer / Intensity
- Setting the DMX512 Address

Note: If there are multiple luminaires in a system, changes would need to be made at each LCD Menu as desired.

Upon power up, the LCD will display the main screen showing the product type/name. If DMX is enabled, the programmed address will appear after power up.

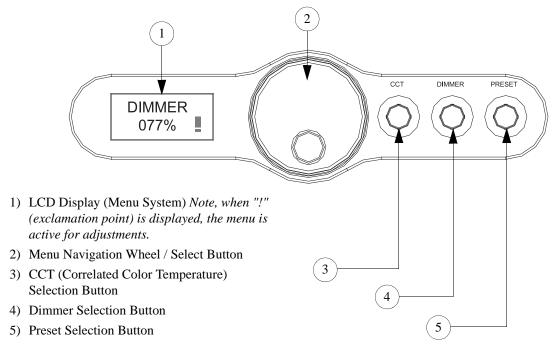



Figure 12: LCD Display and Menu System

2. LCD Display and Menu System Operation

The LCD Display Menu system consists of several categories. Use the Menu Navigation Wheel / Select Button to access and make changes to the menu items. When the desired menu item is reached, press the Menu Navigation Wheel / Select Button to display the menu options. Rotate the Menu Navigation Wheel / Select Button to navigate and configure the menu options as required.

To navigate and access menu settings/selections:

- Step 1. Make sure unit is powered and turned on.
- Step 2. Rotate Navigation Wheel / Select Button (in either direction) to access menu categories.

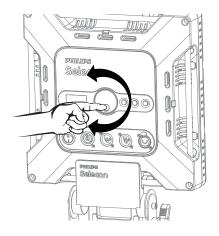

- Step 3. Press Navigation Wheel / Select Button at desired menu item to access and make changes.
- Step 4. Make changes as desired.

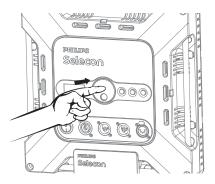



Table 5: Menu Categories and Options

Category	Options	Next Level	Meaning
	Manual	Dimmer	Rotate wheel to set dimmer level from 0 to 100% (in 1% increments)
	(Manual mode, local control only (no DMX)	сст	Rotate wheel to set CCT level from 3000K to 6000K (in 1K increments)
		Address	Sets the units DMX512 address (from 001 to 512)
Mada	Mode (Unit is set to operate in DMX512 8-Bit mode)	LastHold	Sets the units operation should DMX512 signal be disconnected or lost - YES (maintain last DMX512 state) or NO (do not maintain last DMX512 state)
wode		State	Information only - displays if DMX512 is present (connected) or not
		Address	Sets the units DMX512 address (from 001 to 512)
	DMX-16B (Unit is set to operate in	LastHold	Sets the units operation should DMX512 signal be disconnected or lost - YES (maintain last DMX512 state) or NO (do not maintain last DMX512 state)
	DMX512 16-Bit mode)	State	Information only - displays if DMX512 is present (connected) or not

3. Quick Selection Buttons

Note: When pressing one of the Quick Selection buttons (CCT, Dimmer, or Preset), the luminaire will automatically go into Manual Mode.

When in Manual Mode, the Studio Panel LED Luminaire's features can be accessed via the on-board LCD menu system or via three quick select buttons:



- CCT (Correlated Color Temperature) Selection Button
- Dimmer Selection Button
- Preset Selection Button

CCT (Correlated Color Temperature) Selection Button

In Manual Mode, you can press the CCT selection button to adjust the unit's CCT setting in increments of 1.

To adjust the CCT setting in Manual Mode:

Step 1. Press CCT selection button until current CCT value and flashing "!" (exclamation point) is displayed.



- Step 2. Rotate the Navigation Wheel / Selection Button to desired value/setting.
- Step 3. Press Navigation Wheel / Selection Button.
- Step 4. Unit is set to desired CCT value/setting.

Preset Selection Button

In Manual Mode, you can press the Preset button to access the nine (9) preprogrammed white presets in the Studio Panel LED Luminaire's memory. With each press of the CCT Selection Button, the fixture will recall the tuned white presets as shown in Table 6. You can adjust each preset by rotating the Navigation Wheel / Selection Button.



To select one of ten Presets in Manual Mode:

- Step 1. Press Preset selection button until current CCT value and flashing "!" (exclamation point) is displayed.
- Step 2. Continue to press Preset button until desired CCT value is displayed.

Table 6: Preset Selection Button Presets

Preset	CCT
1	3000K
2	3200K
3	3500K
4	4000K
5	4200K

Preset	CCT
6	4500K
7	5000K
8	5600K
9	6000K

Note: In this mode, you can adjust the preset value by rotating the Navigation Wheel / Selection Button to desired value/setting. This adjustment is similar to the procedure described in "CCT (Correlated Color Temperature) Selection Button" on page 13.

- Step 3. Press Navigation Wheel / Selection Button to set desired value/setting.
- Step 4. Unit is set to desired Preset value/setting.

Dimmer Selection Button

In Manual Mode, you can press the Dimmer selection button to adjust the unit's intensity level in increments of 1%.

To adjust the Dimmer (intensity) level in Manual Mode:

- Step 1. Press Dimmer selection button until current intensity level and flashing "!" (exclamation point) is displayed.
- Step 2. Rotate the Navigation Wheel / Selection Button to desired value/setting.
- Step 3. Press Navigation Wheel / Selection Button.
- Step 4. Unit is set to desired intensity level/setting.



DMX CONTROL

This section contains information for operating the luminaire using DMX control in 16-bit or 8-Bit modes. For Menu options and detailed information, see "LCD Display and Menu System" on page 12.

Note: These tables assume a DMX start address of 1. When a different starting address is used, this address becomes channel 1 function and other functions follow in sequence.

Note: When pressing one of the Quick Selection buttons (CCT, Dimmer, or Preset as described in "Quick Selection Buttons" on page 13), the luminaire will automatically go into Manual Mode.

1. 16-Bit Mode

Table 7 provides DMX channel mapping of all DMX512 control values when the Studio Panel LED Luminaire is in 16-bit DMX512 mode (as set by the luminaire's menu system).

Table 7: Studio Panel LED Luminaire DMX Channel Mapping (16-Bit Mode)

DMX Channel	Parameter	Range DMX	Range%	Default - recom- mended console default values	Description	
1	Intensity - High	0 - 65535	0 - 100%	0	16-bit control for Intensity of LED settings.	
2	Intensity - Low	0 - 65555				
3	CCT - High Byte	0 - 65535	0 4000/	0	40 hitt	
4	CCT - Low Byte	0 - 65535	0 - 100%	100% 0 16 bit control of CCT from 3000k	18 bit control of CC1 from 3000K to 6000K.	

2. 8-Bit Mode

Table 8 provides DMX channel mapping of all DMX512 control values when the Studio Panel LED Luminaire is in 8-bit DMX512 mode (as set by the luminaire's menu system).

Table 8: Studio Panel LED Luminaire DMX Channel Mapping (8-Bit Mode)

DMX Channel	Parameter	Range DMX	Range%	Default - recom- mended console default values	Description
1	Intensity	0 - 255	0 - 100%	0	8-bit control for Intensity of LED settings.
2	CCT	0 - 255	0 - 100%	0	8 bit control of CCT from 3000K to 6000K.

RDM CONTROL

1. Studio Panel LED Luminaire RDM Parameter IDs

The following tables outline and describe all the RDM parameters IDs associated with Studio Panel LED Luminaires.

- Table 9, "Studio Panel LED Luminaire RDM Product Parameters IDs"
- Table 10, "Studio Panel LED Luminaire RDM UID"
- Table 11, "Studio Panel LED Luminaire RDM Parameters IDs"
- Table 12, "Studio Panel LED Luminaire RDM Manufacturer Status IDs," on page 18
- Table 13, "Studio Panel LED Luminaire RDM Manufacturer Specific PIDs," on page 18

Table 9: Studio Panel LED Luminaire RDM Product Parameters IDs

Model ID	Manufacturer	Model Description	Product Category	
0x0101	Philips Selecon	Studio Panel LED Light	0x0509	

Table 10: Studio Panel LED Luminaire RDM UID

UID							
MSB of ESTA	LSB of ESTA	MSB of	LSB of	MSB of	LSB of		
50H	53H	01H	01H	Unique Seq.	Unique Seq.		

Table 11: Studio Panel LED Luminaire RDM Parameters IDs

Get Allowed	Set Allowed	RDM Parameter IDs	Value	Comment	Implemented
		Category - Network N	lanagement		
		DISC_UNIQUE_BRANCH	0x0001		
		DISC_MUTE	0x0002		
		DISC_UN_MUTE	0x0003		
		PROXIED_DEVICES	0x0010		
		PROXIED_DEVICES_COUNT	0x0011		
		COMMS_STATUS	0x0015		
	1	Category - Status (Collection		
		QUEUED_MESSAGE	0x0020		
		STATUS_MESSAGES	0x0030		
		STATUS_ID_DESCRIPTION	0x0031		
		CLEAR_STATUS_ID	0x0032		
		SUB_DEVICE_STATUS_REPORT_THRESHOLD	0x0033		
	1	Category - RDM Int	formation		1
		SUPPORTED_PARAMETERS	0x0050	Support required only if supporting Parameters beyond the minimum required set.	•
■ PARAMETER_DESCRIPTION			0x0051	Support required for Manufacturer-Specific PIDs exposed in SUPPORTED_ PARAMETERS message.	•
		Category - Product I	nformation	<u> </u>	•

Table 11: Studio Panel LED Luminaire RDM Parameters IDs

Get Allowed	Set Allowed	RDM Parameter IDs	Value	Comment	Implemented
		DEVICE_INFO	0x0060		
		PRODUCT_DETAIL_ID_LIST	0x0070		
		DEVICE_MODEL_DESCRIPTION	0x0080		
		MANUFACTURER_LABEL	0x0081		
		DEVICE_LABEL	0x0082		
		FACTORY_DEFAULTS	0x0090		
		LANGUAGE_CAPABILITIES	0x00A0		
		LANGUAGE	0x00B0		
		SOFTWARE_VERSION_LABEL	0x00C0		
		BOOT_SOFTWARE_VERSION_ID	0x00C1		
		BOOT_SOFTWARE_VERSION_LABEL	0x00C2		
	l	Category - DMX	512 Setup		1
		DMX_PERSONALITY	0x00E0		
		DMX_PERSONALITY_DESCRIPTION	0x00E1		
		DMX_START_ADDRESS	0x00F0	Required if device uses a DMX Slot	
		SLOT_INFO	0x0120		
		SLOT_DESCRIPTION	0x0121		
		DEFAULT_SLOT_VALUE	0x0122		
		Category - Senso	ors 0x02xx		
		SENSOR_DEFINITION	0x0200		
		SENSOR_VALUE	0x0201		
		RECORD_SENSORS	0x0202		
		Category - Dimmer Settings			
		Category - Power / Lam			
		DEVICE_HOURS	0x0400		
		LAMP_HOURS	0x0401		
		LAMP_STRIKES	0x0402		
		LAMP_STATE	0x0403		
		LAMP_ON_MODE	0x0404		
		DEVICE_POWER_CYCLES	0x0405		
_	T	Category - Display S			_
		DISPLAY_INVERT	0x0500		
		DISPLAY_LEVEL Category - Configu.	0x0501		
_		PAN_INVERT	0x0600		
		TILT_INVERT	0x0600		
		PAN_TILT_SWAP	0x0602		
		REAL_TIME_CLOCK	0x0602 0x0603		+
		Category - Cont			
		IDENTIFY_DEVICE	0x1000		
	=	RESET_DEVICE	0x1001		_
	_	POWER_STATE	0x1001		
	-	I OWEN_OIATE	0.1010		

Table 11: Studio Panel LED Luminaire RDM Parameters IDs

Get Allowed	Set Allowed	RDM Parameter IDs	Value	Comment	Implemented
		PERFORM_SELFTEST	0x1020		
		SELF_TEST_DESCRIPTION	0x1021		
		CAPTURE_PRESET	0x1030		
		PRESET_PLAYBACK	0x1031		

Table 12: Studio Panel LED Luminaire RDM Manufacturer Status IDs

Manufacturer Specific messages are in the range of 0x8000 - 0xFFDF. Each Manufacturer-specific Status ID shall have a unique meaning, which shall be consistent across all products having a given Manufacturer ID. See Table B-2, ANSI E1.20-2010.

	Status ID Message	Value	Data Value 1	Data Value 2	Status ID Description
Ī	8100H		00H	00H	ALL OK

Table 13: Studio Panel LED Luminaire RDM Manufacturer Specific PIDs

Get Allowed	Set Allowed	RDM Parameter IDs	Туре	Length	Unit	Prefix	Min	Max	Default	Description
	Category - Manufacturer Defined PIDs - Range is 0x8000-0xffdf (See ANSI E1.20-2010 Standard, Table A-3)									
		8A01H	U8	1	None	None	0	100	100	DIMMER
		8A03H	U8	1	None	None	0	100	100	ССТ
		8A0CH	U8	1	None	None	0	3	0	DMX Fail Mode

CLEANING AND CARE



WARNING! All cleaning should be performed with power completely removed from the luminaire. Never remove protective covers when luminaire is powered. Wear appropriate protective eye wear and gloves when cleaning the fixture. All service and maintenance, other than described herein, should be performed by a qualified technician or Authorized Service Center.

1. Special Cleaning and Care Instructions

Being a solid-state fixture, and unlike most fixtures, the Studio Panel LED Luminaire requires very little routine maintenance by the user. This section covers portions of the luminaire that can be removed for cleaning.

The Studio Panel LED Luminaire special care when it comes to cleaning front lens assembly. Additional care needs to be taken with the plastic components because they are much easier to scratch or damage than glass.

The following is a list of cleaning materials required to care for your Studio Panel LED Luminaire:

- · Lint free lens tissue
- Lint or powder free gloves
- Reagent grade isopropyl alcohol*
- A mild soap solution.

Note: *Reagent grade isopropyl alcohol is good to use on the Studio Panel LED Luminaire plastic optics with anti-reflection coatings.

If the lens is still dirty after using isopropyl alcohol, for instance if fingerprints or oil is just redistributed and not cleaned off the optic, then a mild soap and water solution can be used to gently wash the lens. Repeat the cleaning with isopropyl alcohol to eliminate streaks and soap residue.



WARNING! Under no circumstances should ammonia-based cleaners, acetone, or other harsh solvents be used on or near the Studio Panel LED Luminaire. These types of cleaners or solvents can permanently damage the optics or housings of the fixture.

If you have any questions regarding the use or care of your Studio Panel LED Luminaire, please contact Philips Selecon technical support or your local Authorized Dealer.

2. Front Lens Cleaning

To clean the front lens:

- Step 1. Turn off luminaire and allow to cool completely.
- Step 2. Apply a small amount of reagent grade isopropyl alcohol to lint-free lens tissue.
- Step 3. Wipe all debris, dirt, fingerprints, etc. from lens.
- Step 4. Using a second lint-free lens tissue, wipe off any alcohol residue.

3. Service and Maintenance

For all other service and maintenance issues, please contact your local Philips Selecon office or an Authorized Service Center.



WARNING! Disassembly (other than as described herein), alterations, unauthorized service, etc. will void the product warranty. Contact your local Philips Selecon office or an Authorized Service Center for technical support and service.

4. Accessories

Only Philips Selecon approved accessories should be used with your Studio Panel LED Luminaire. For a list of available accessories from Philips Selecon, please see "Accessories" on page 3. For questions regarding accessories, please contact your local Authorized Philips Selecon Dealer or Philips Selecon office.

TECHNICAL SPECIFICATIONS

Studio Panel LED Luminaire Operational Specifications 1.

Tunable White LED Array Source:

Light Output: > 2.000 lumens

Color Temperature: 3000 - 6000K (user adjustable) 100V to 240V (+/- 10%, auto-ranging) Input Voltage (AC):

0.80 Amps (max.) at 115V / 0.40 Amps (max.) at 230V Current (AC):

12V to 24V (50 Watts max.) Input Voltage (DC):

50/60Hz Frequency:

DMX512 (1990) / DMX512A (RDM) / On-Board Menu Control Protocols:

Ambient Temperature: 0 to 40 degrees C (32 to 104 degrees F)

Humidity: 5%-95% Non condensing Cooling: **Natural Convection**

Weight: 5.1 lbs (2.3 kg) - Luminaire only (no mount, AC input cable or accessories)

Compliance: cETLus listed and CE Marked. IP20 Rated. This product is a Class II Luminaire and has an


earth connection for functional purpose only and that it is separated from live parts by

double insulation. This luminaire complies with IEC 60598-2-17-1984+A2.1990 used in

conjunction with IEC 60598-1-2008

Note: Common model specifications shown. For specific model specifications, features, and accessories, refer to the product specification sheet or visit the Philips Selecon web site at www.seleconlight.com for more details.

Studio Panel LED Luminaire Dimensions 2.

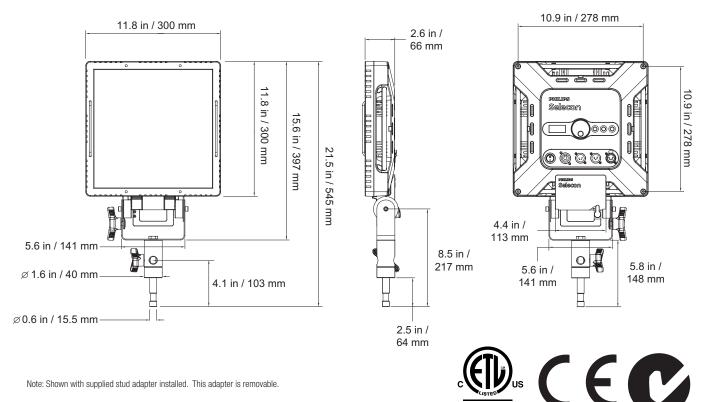

Note: Shown with supplied stud adapter installed. This adapter is removable.



PHILIPS Selecon

Philips Selecon Dallas 10911 Petal Street Dallas, TX 75238 Tel: +1 214-647-7880

Fax: +1 214-647-8031

Philips Selecon Hong Kong Unit C, 14/F, Roxy Industrial Centre No. 41-49 Kwai Cheong Road Kwai Chung, N.T., Hong Kong

Tel: +852 2796 9786 Fax: +852 2798 6545

Philips Selecon Auckland 19-21 Kawana Street Northcote, Auckland 0627 New Zealand

Tel: +64 9 481 0100 Fax: +64 9 481 0101

Philips Selecon Europe Rondweg zuid 85 Winterswijk 7102 JD The Netherlands Tel: +31(0) 543-542516

www.seleconlight.com

©2014 Philips Group